











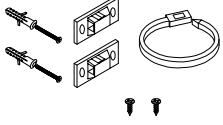


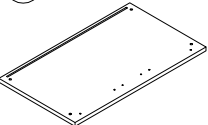
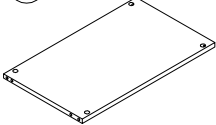
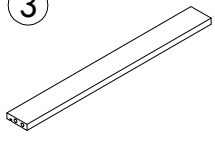
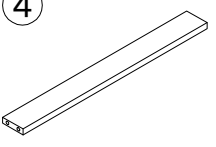
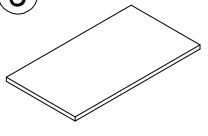
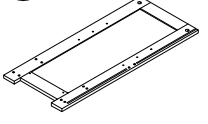
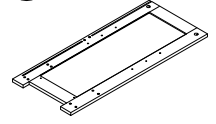
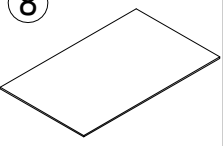
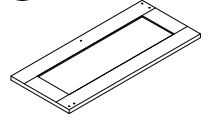
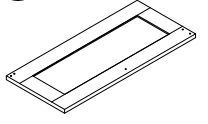
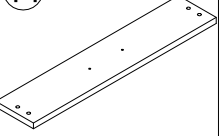
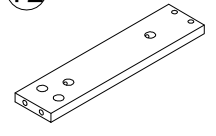
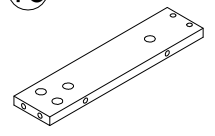
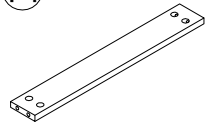
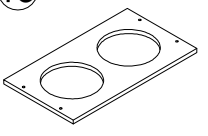
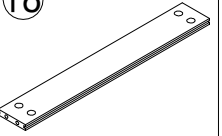
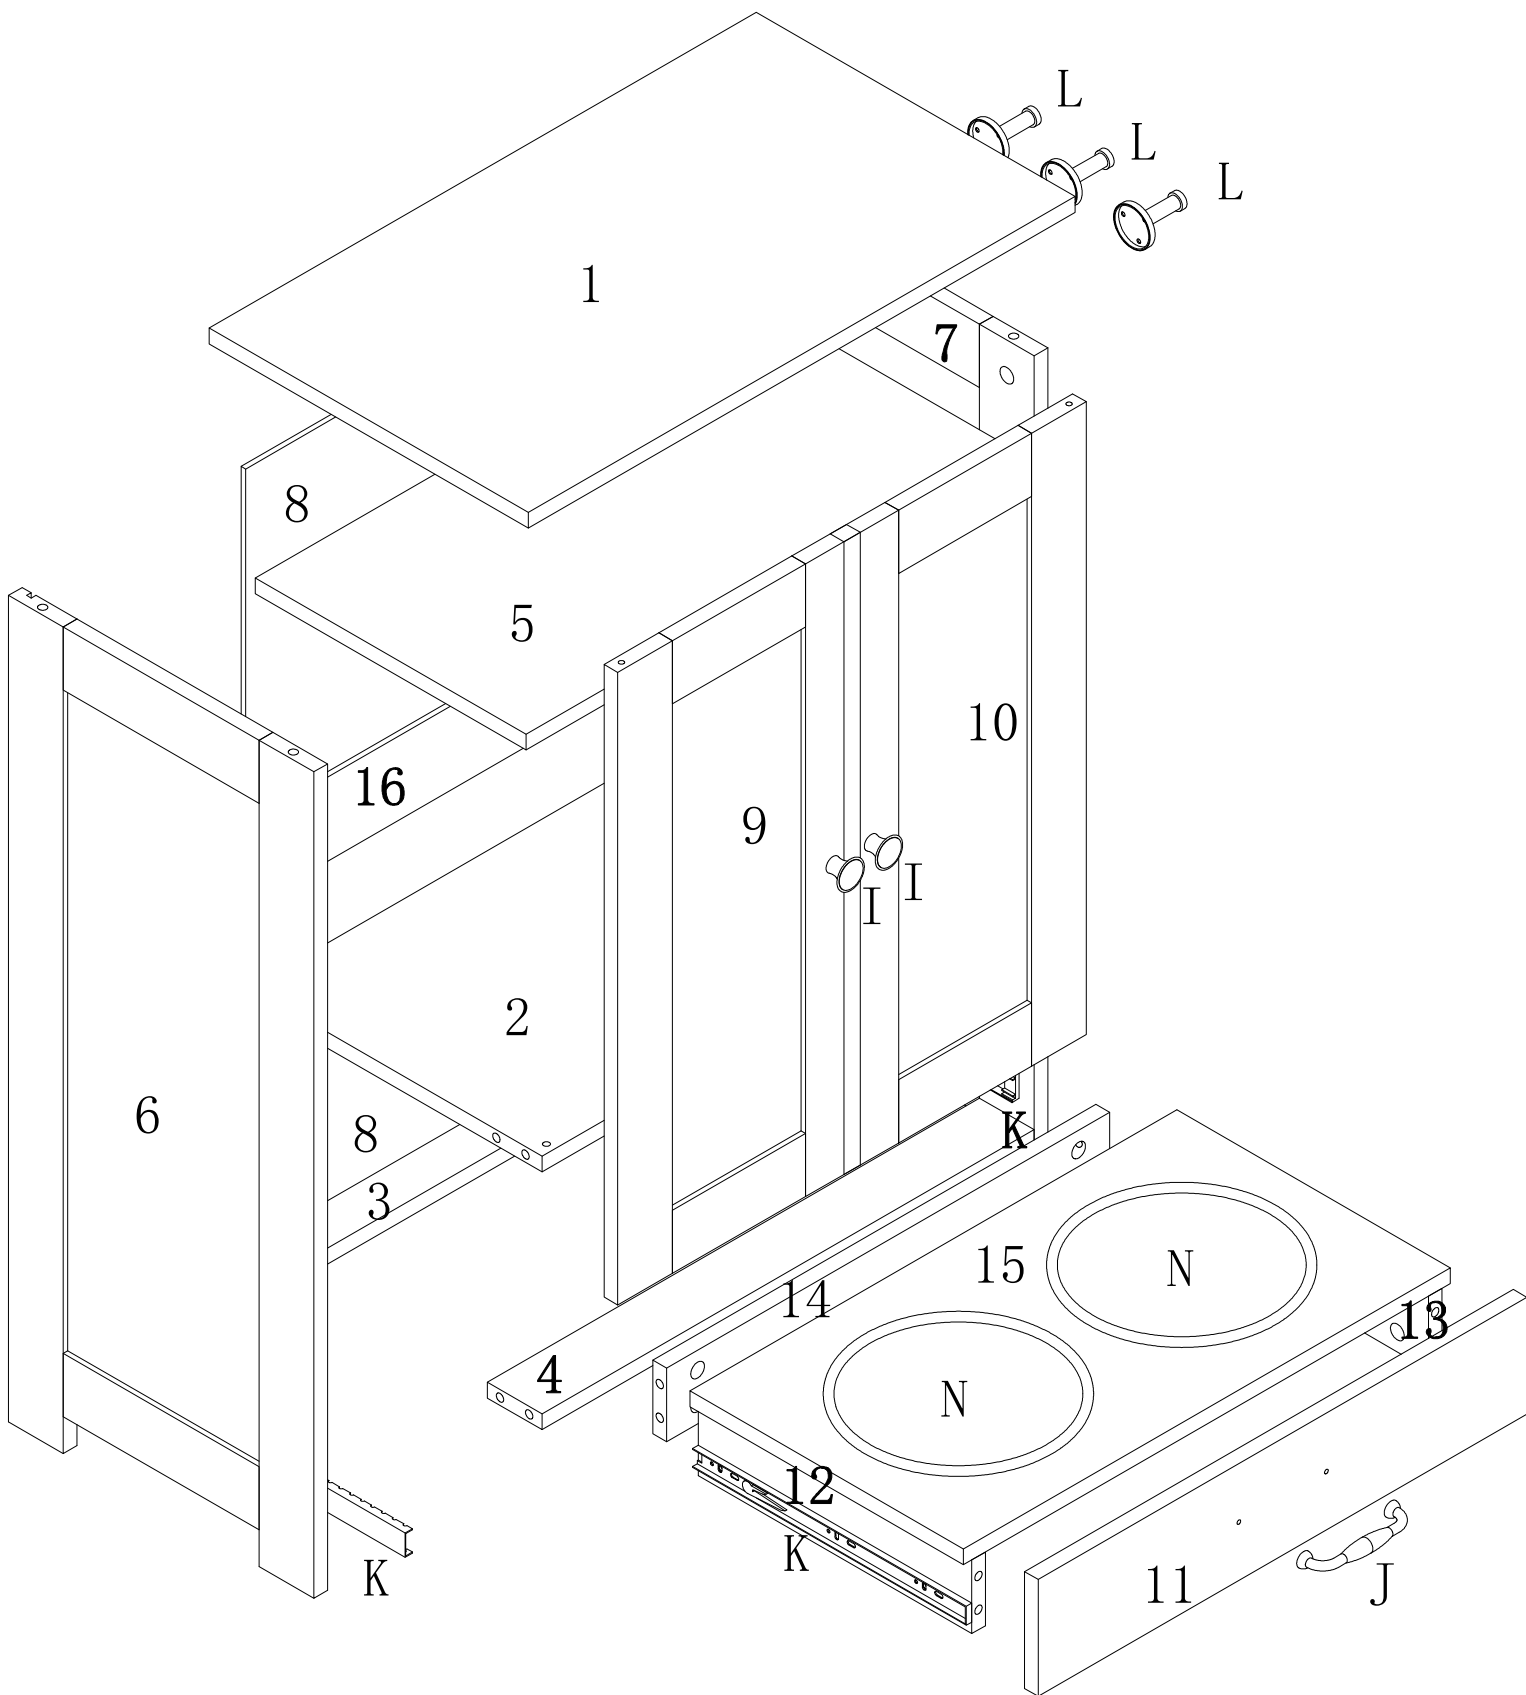


## Hardware List


<p><b>(A)</b></p>  <p>30PCS (M6*40)</p>	<p><b>(B)</b></p>  <p>6PCS (M8*40)</p>	<p><b>(C)</b></p>  <p>30PCS (<math>\varnothing 12 \times 15</math>)</p>	<p><b>(D)</b></p>  <p>4PCS</p>	<p><b>(E)</b></p>  <p>2PCS</p>
<p><b>(F)</b></p>  <p>25PCS (M4*12)</p>	<p><b>(G)</b></p>  <p>2PCS</p>	<p><b>(H)</b></p>  <p>4PCS</p>	<p><b>(I)</b></p>  <p>2PCS</p>	<p><b>(J)</b></p>  <p>1PC</p>
<p><b>(K)</b></p>  <p>1PC</p>	<p><b>(L)</b></p>  <p>3PCS</p>	<p><b>(M)</b></p>  <p>1PC</p>	<p><b>(N)</b></p>  <p>2PCS</p>	<p><b>(O)</b></p>  <p>1PC</p>

## Panel List

<p><b>(1)</b></p>  <p>1PC</p>	<p><b>(2)</b></p>  <p>1PC</p>	<p><b>(3)</b></p>  <p>1PC</p>	<p><b>(4)</b></p>  <p>1PC</p>	<p><b>(5)</b></p>  <p>1PC</p>
<p><b>(6)</b></p>  <p>1PC</p>	<p><b>(7)</b></p>  <p>1PC</p>	<p><b>(8)</b></p>  <p>2PCS</p>	<p><b>(9)</b></p>  <p>1PC</p>	<p><b>(10)</b></p>  <p>1PC</p>
<p><b>(11)</b></p>  <p>1PC</p>	<p><b>(12)</b></p>  <p>1PC</p>	<p><b>(13)</b></p>  <p>1PC</p>	<p><b>(14)</b></p>  <p>1PC</p>	<p><b>(15)</b></p>  <p>1PC</p>
<p><b>(16)</b></p>  <p>1PC</p>				




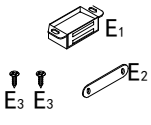


## Assembling the unit with camlocks and wood dowels

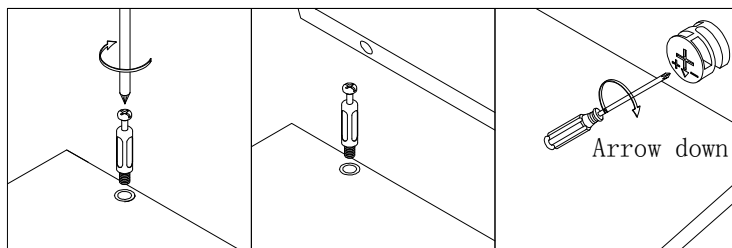


## Assembly instructions


step 1

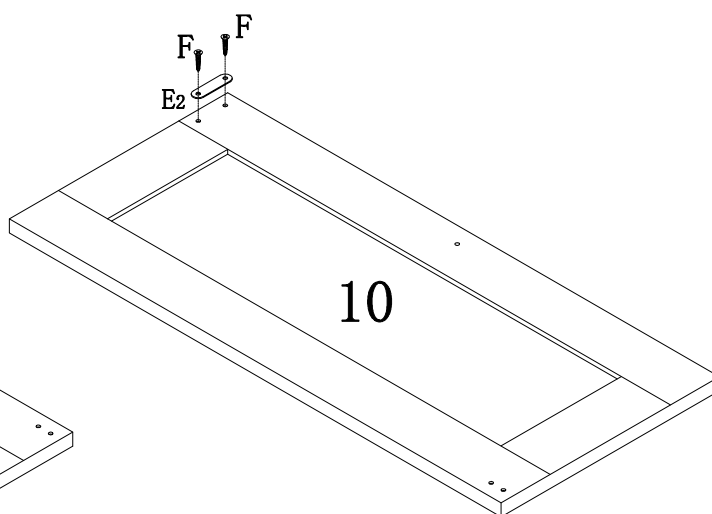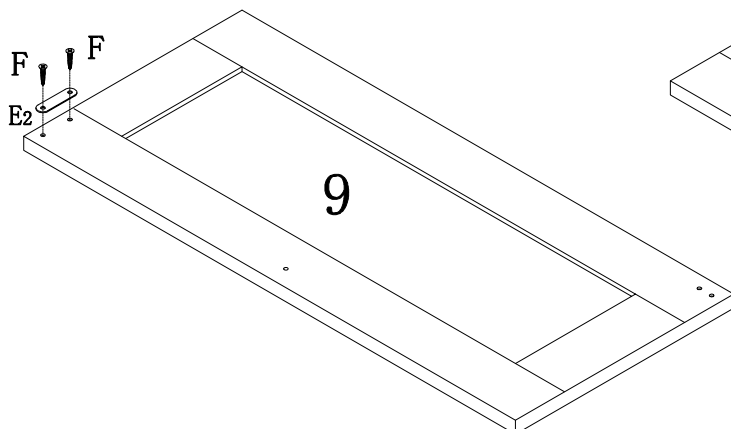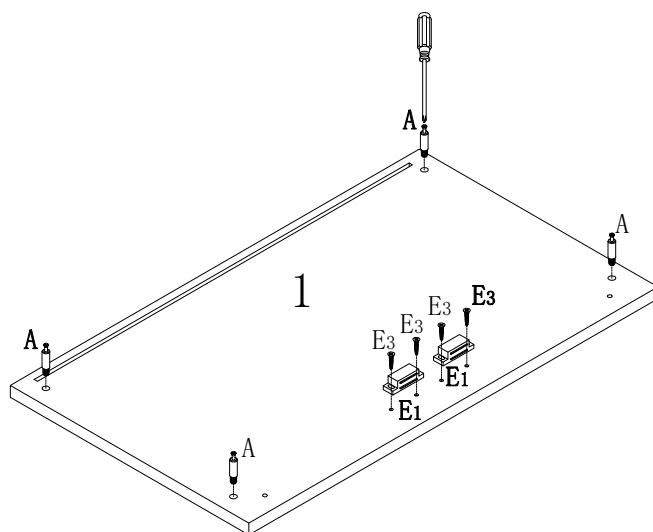


## step 2

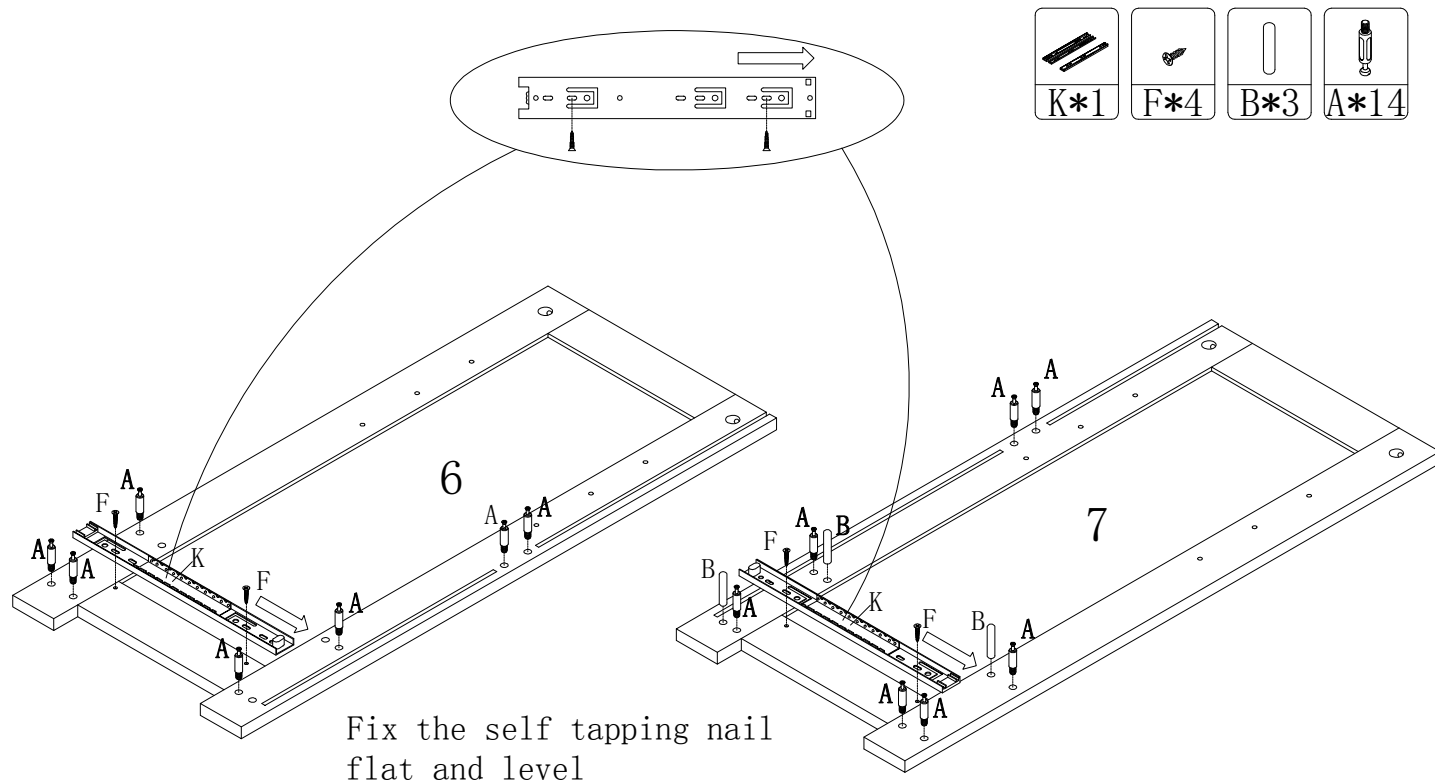


## step 3

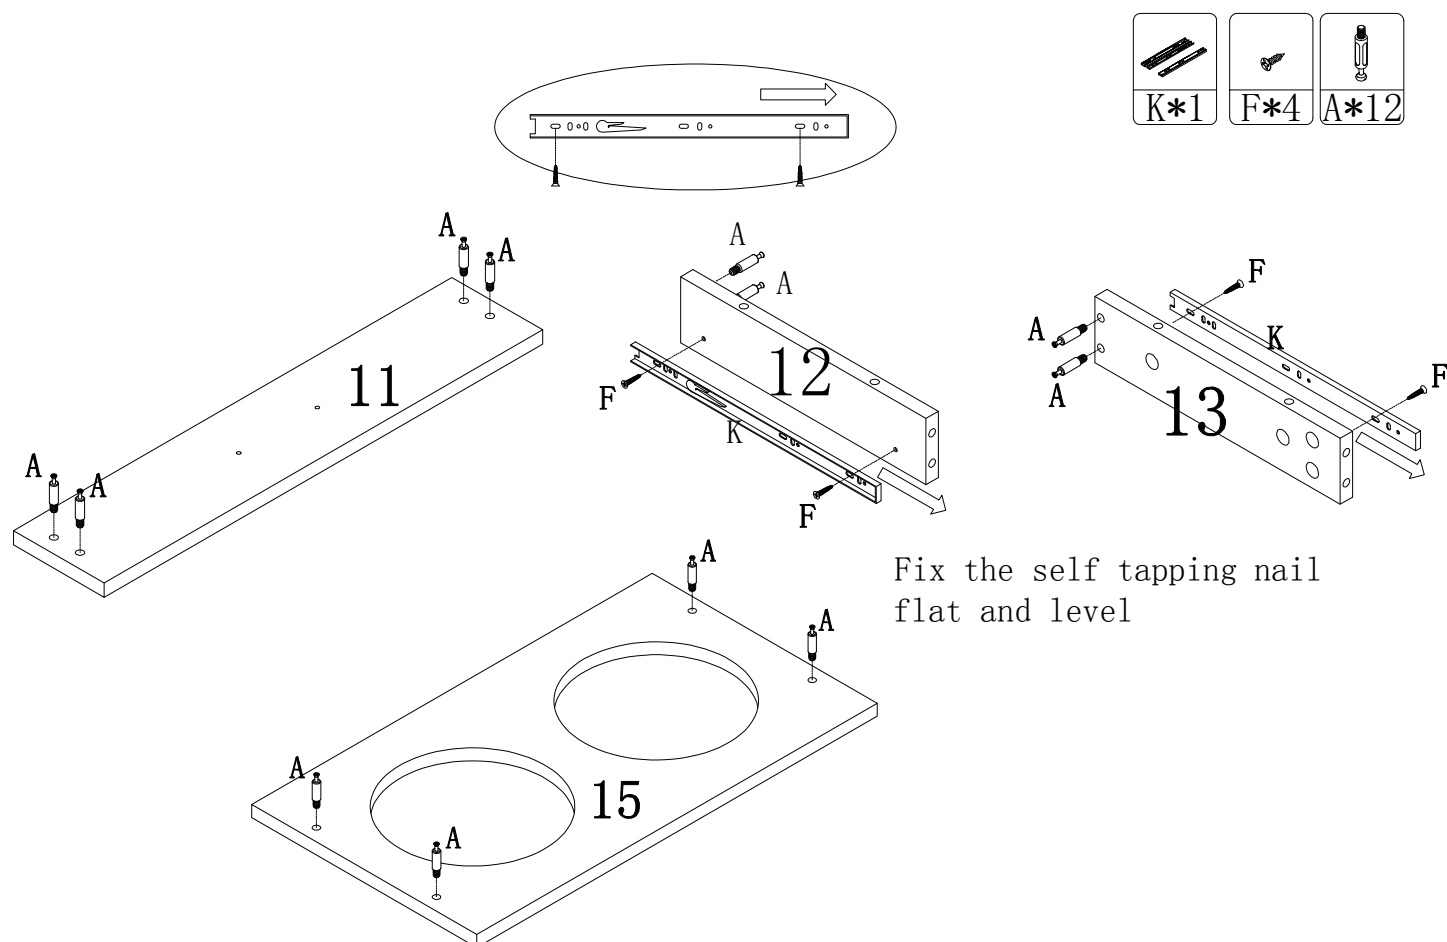



step 4

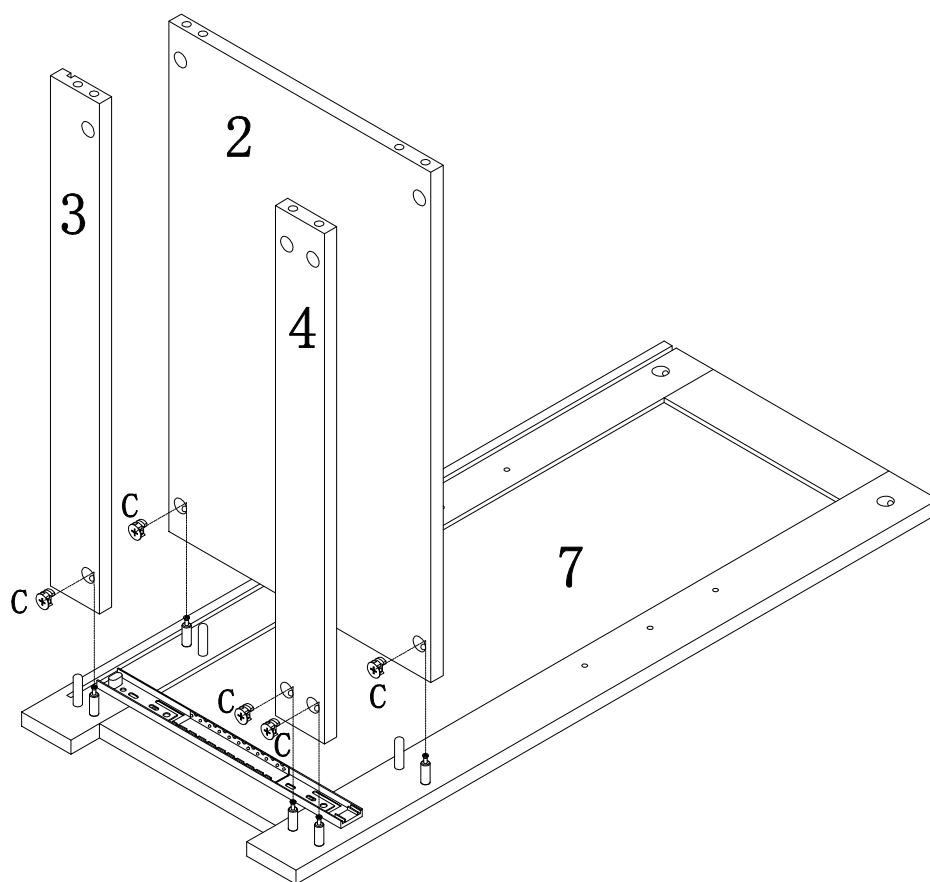


step 5

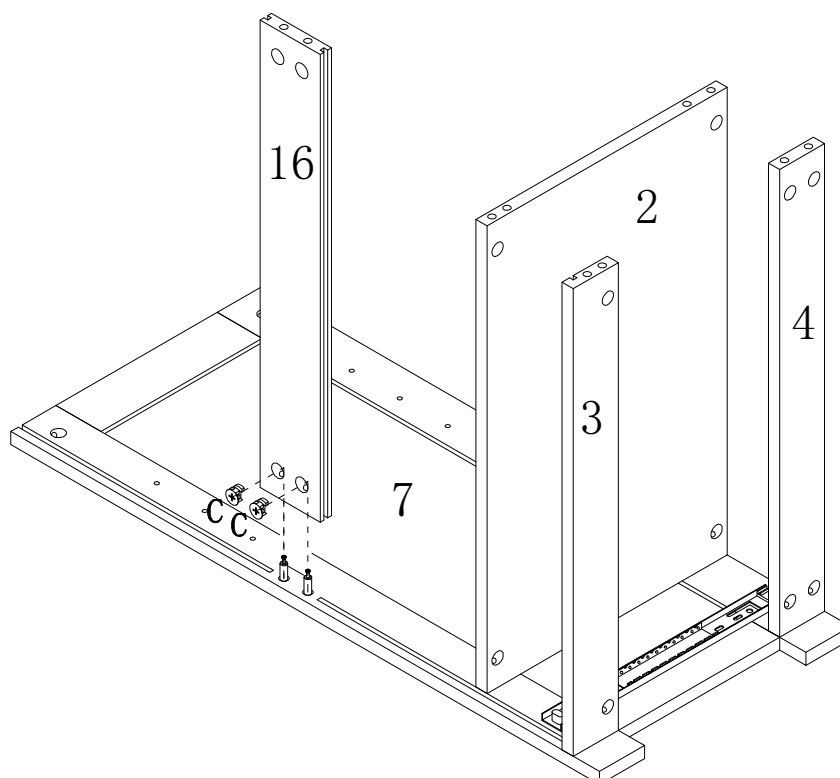


step 6

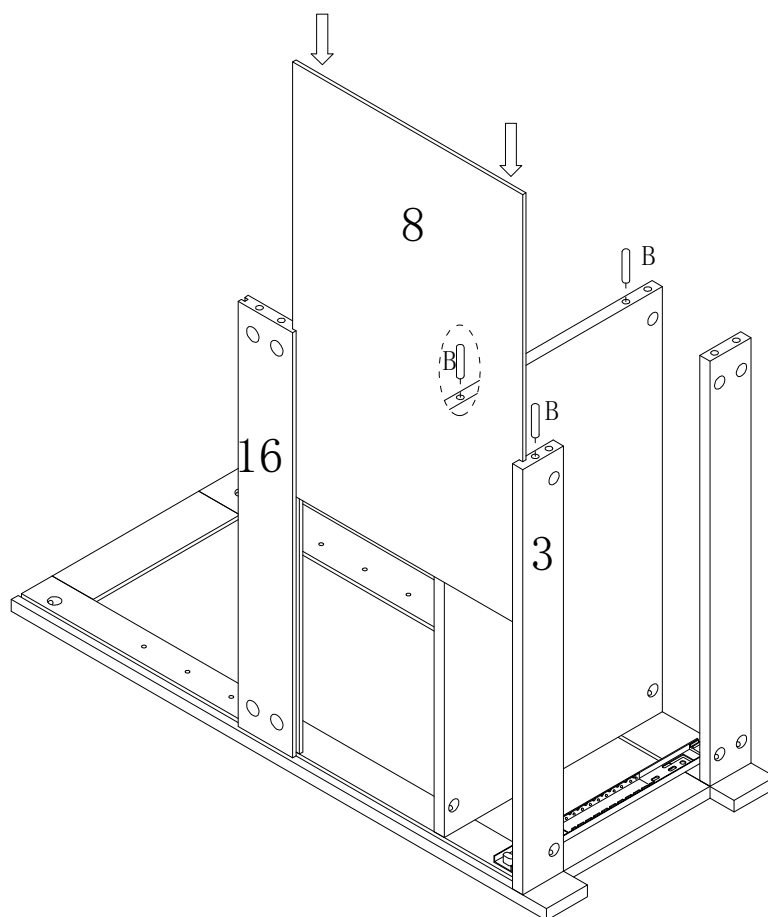



step 7

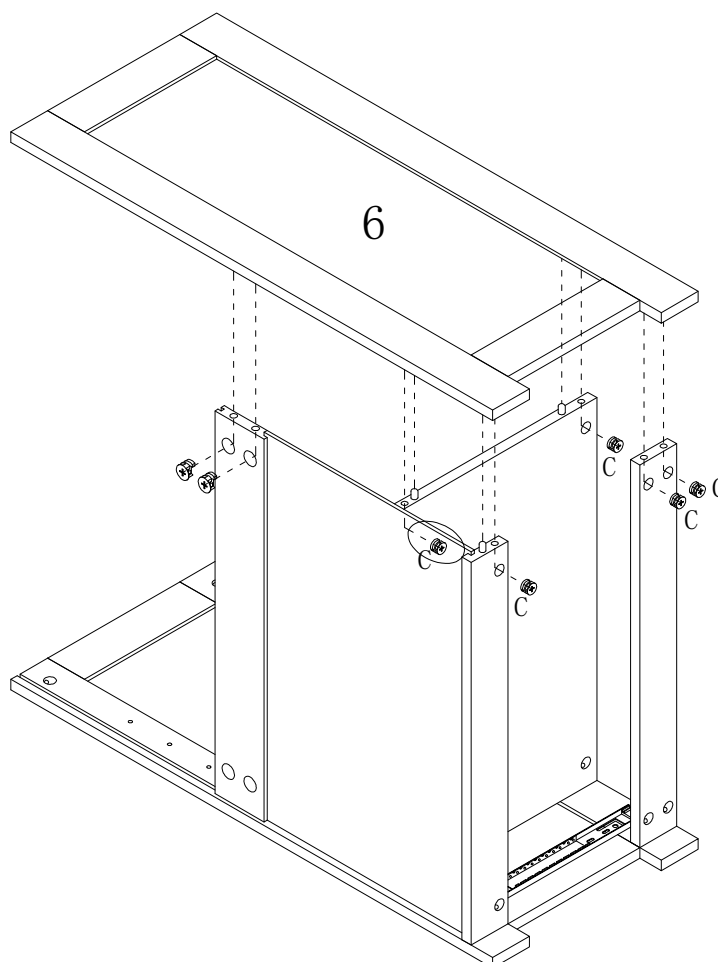

step 8



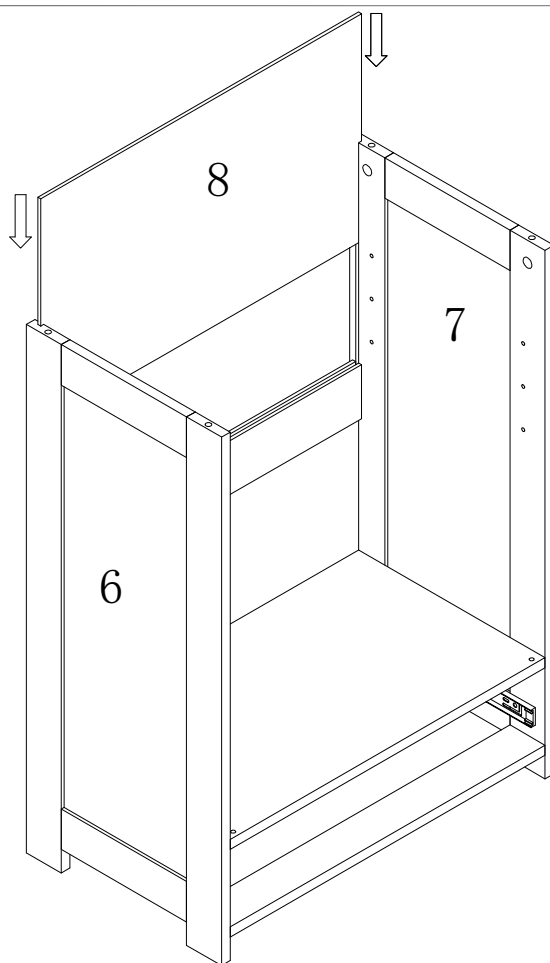


step 9


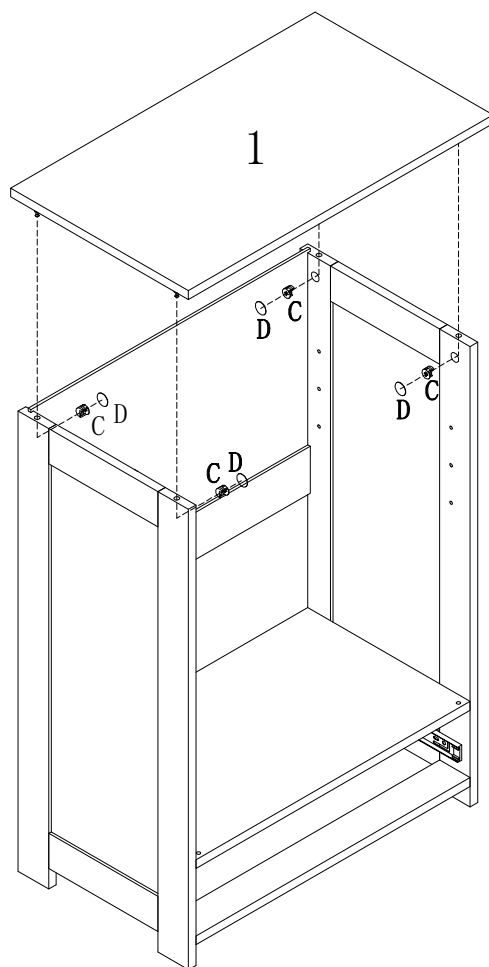






step 10

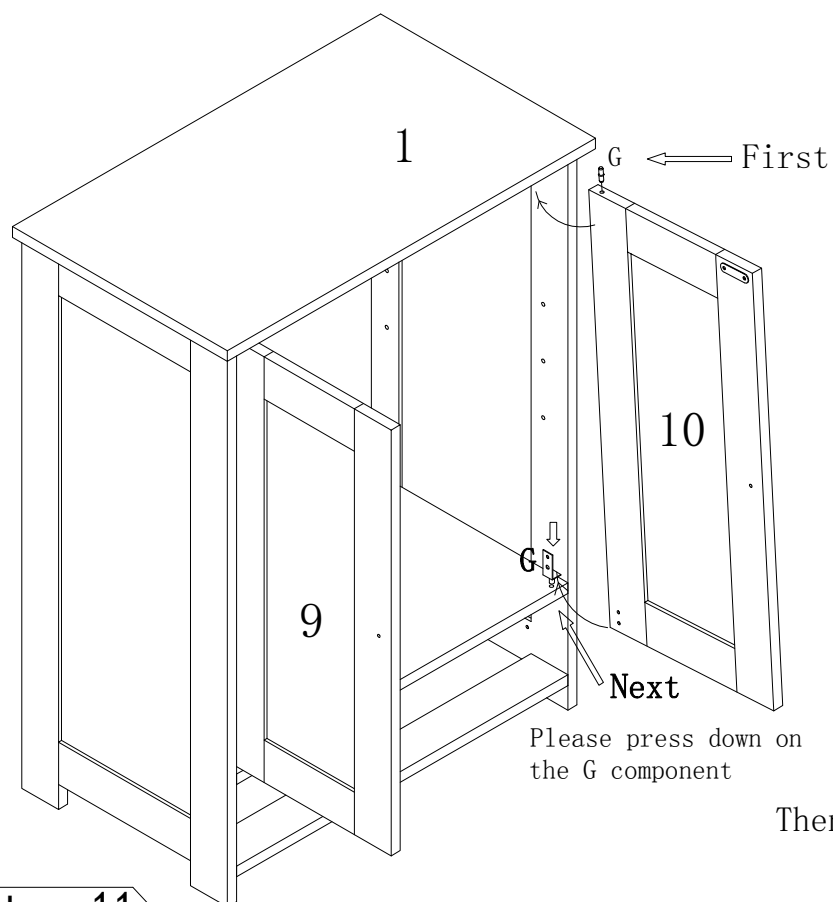


step 11

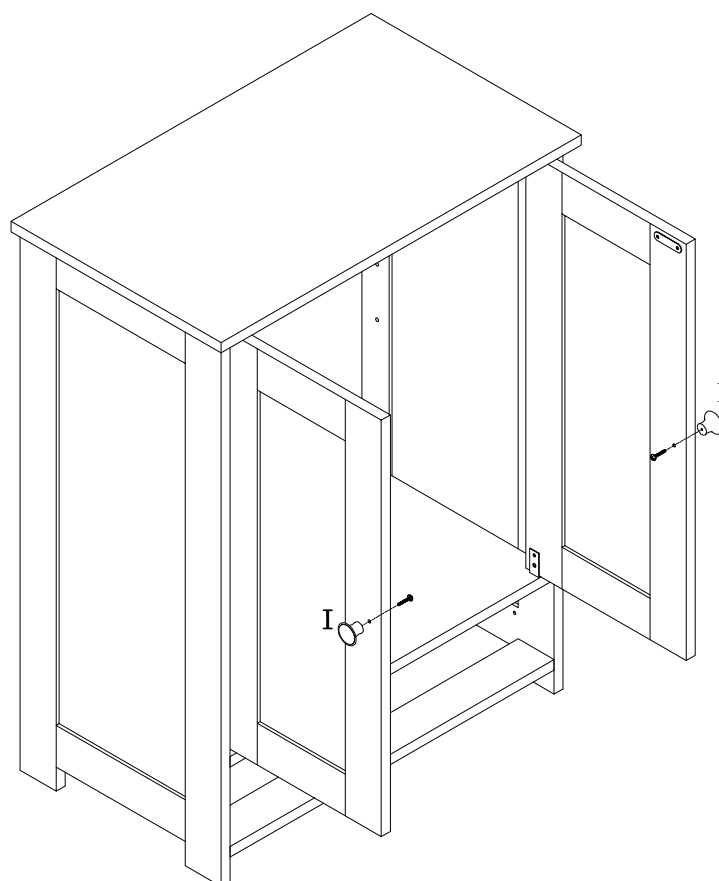



## step 12

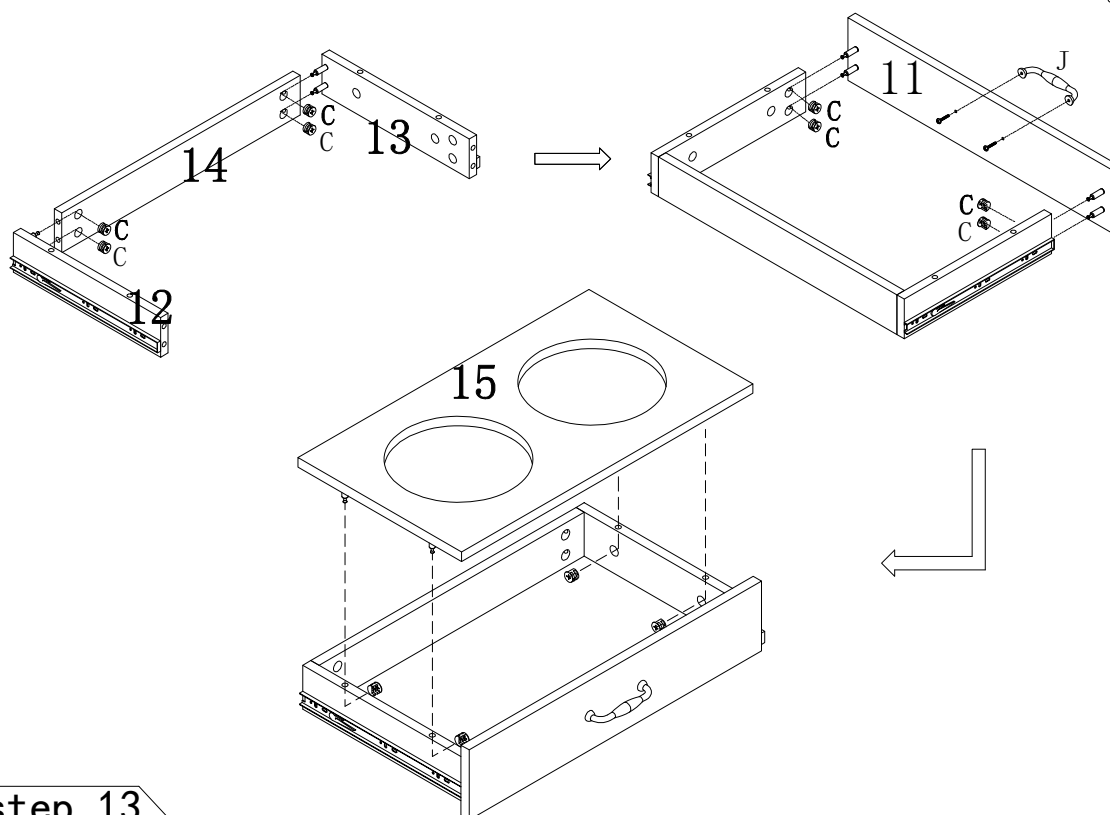




## step 13

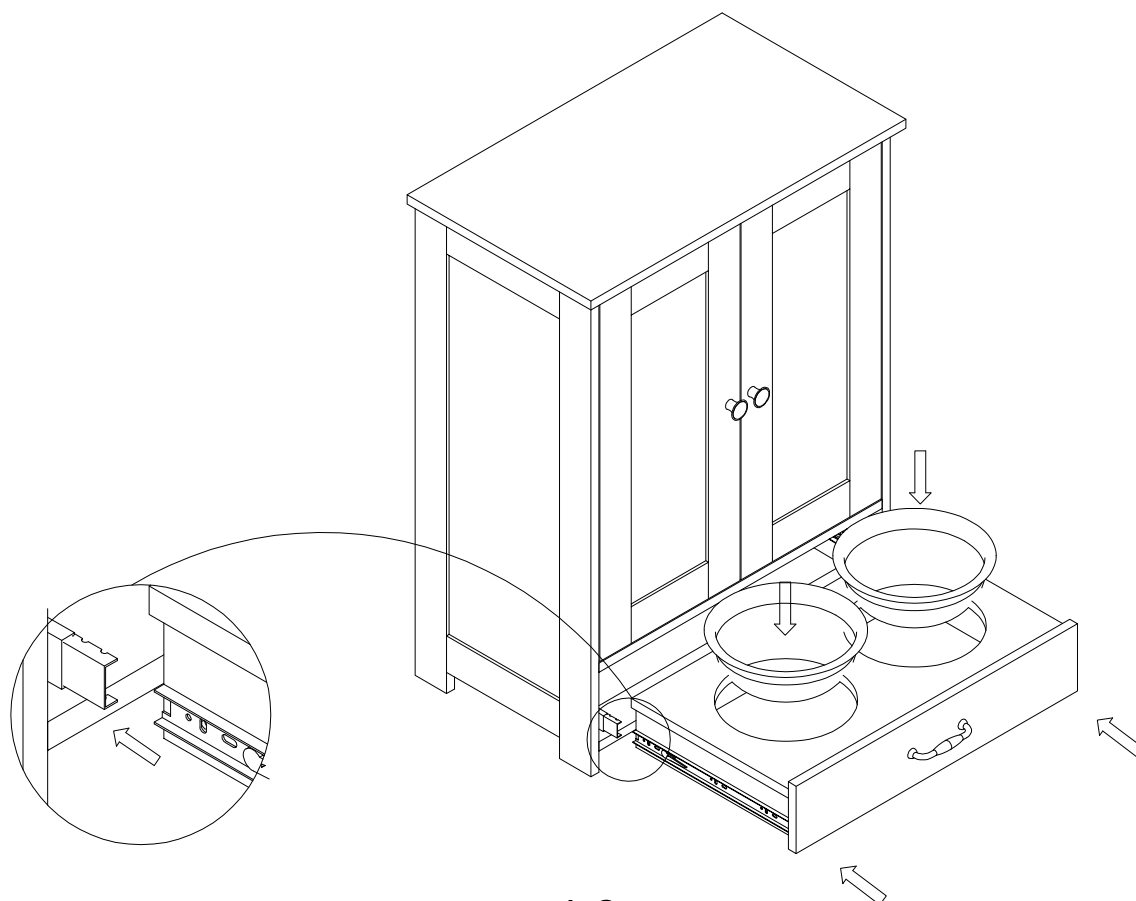







step 14

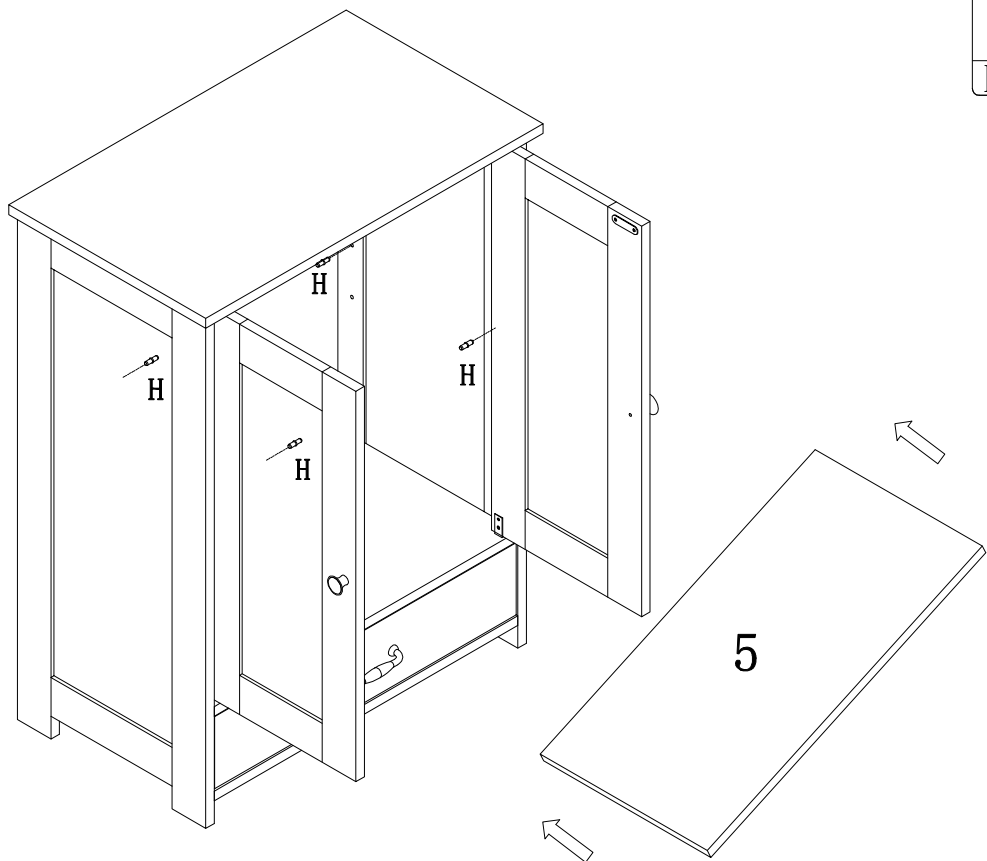

step 15

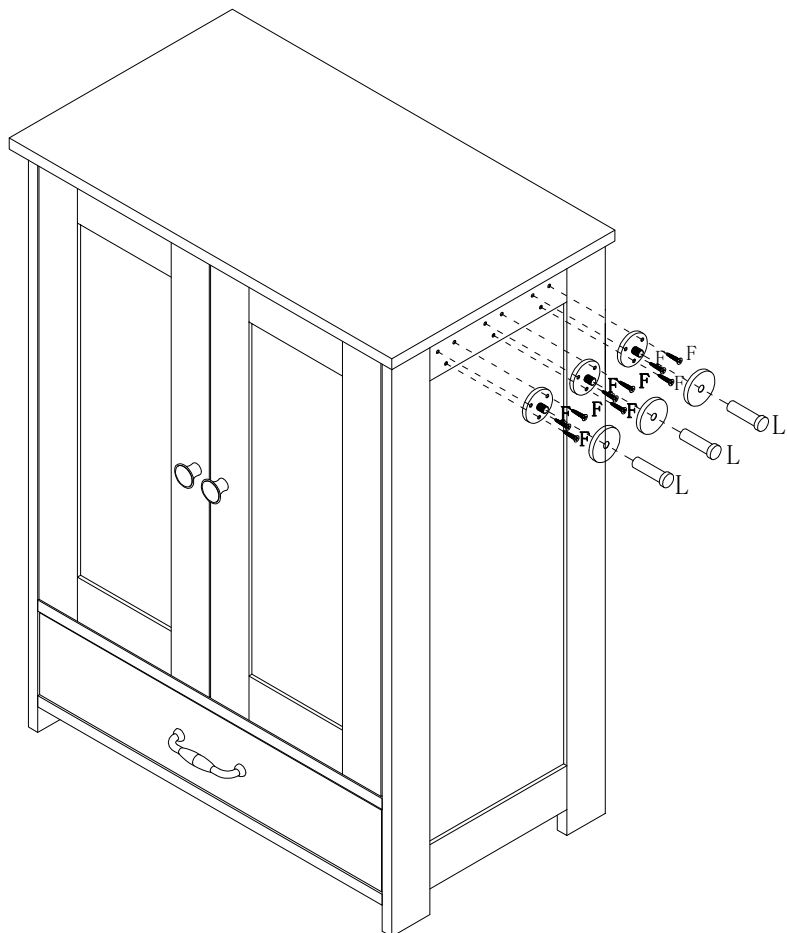

Installation instructions for  
furniture anti-tip device

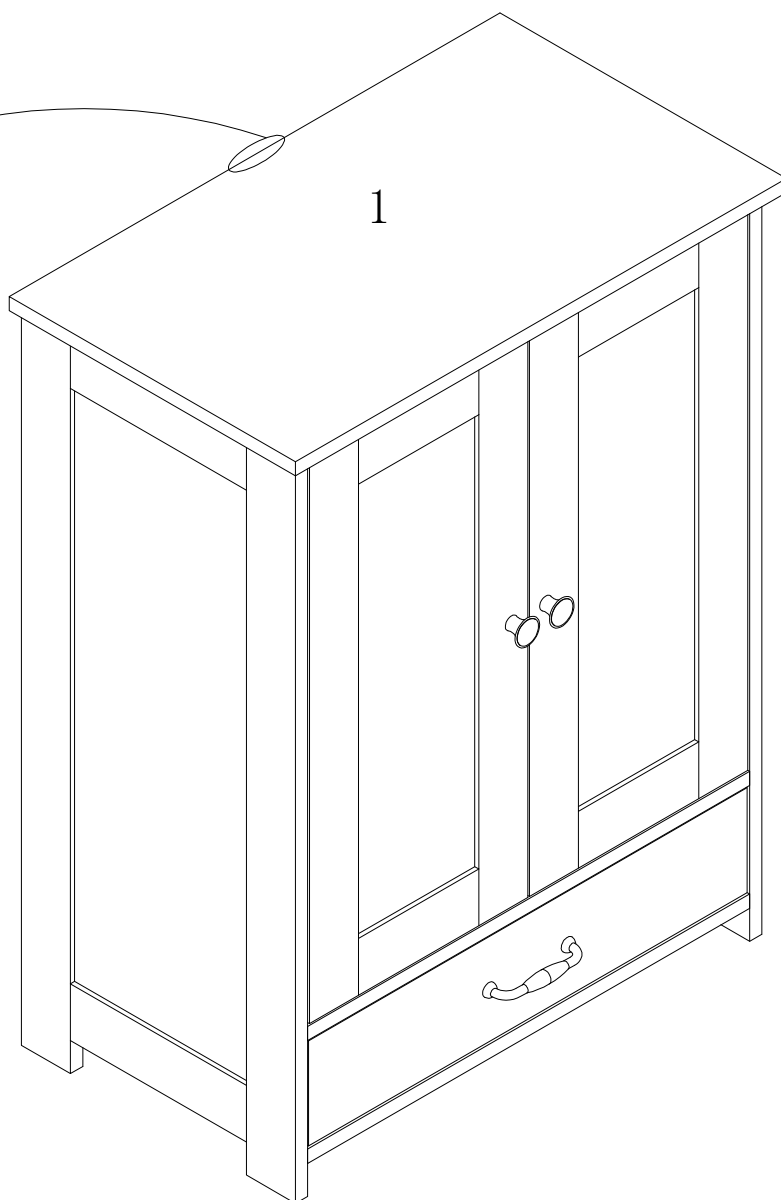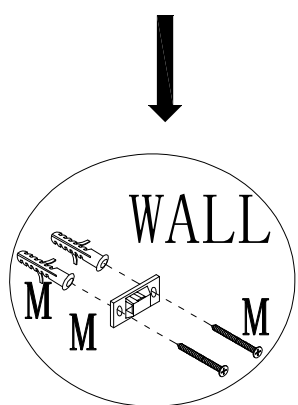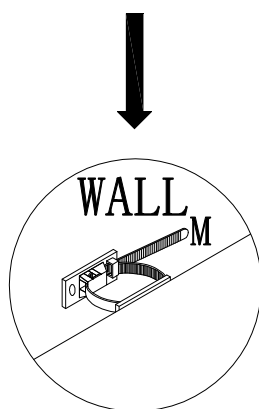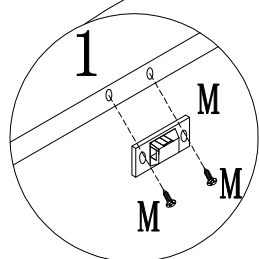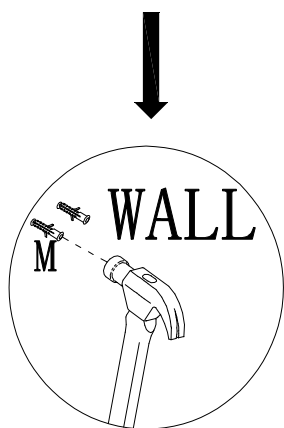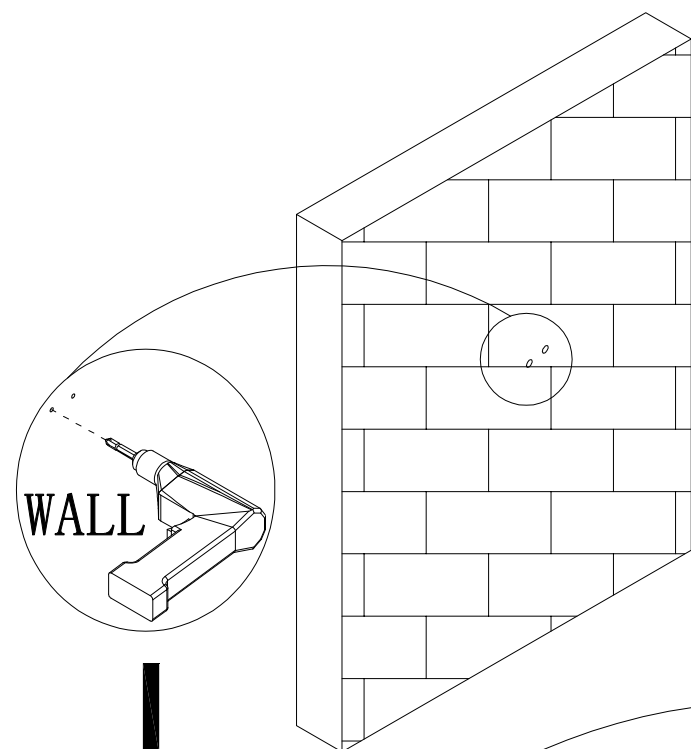

# Warning: Tip-Over Hazard!

1. Dangerous tipping may occur, potentially causing death or serious injuries.
2. Prevent tip-over: Use tip-over restraint device provided. Secure to wall where possible.
3. Instructions: Follow the detailed installation instructions.
4. In Emergency: Here's what you should do in the event that the furniture tips over.  
Stay Calm: Try to keep calm and assess the situation.  
Seek Help: If the situation is serious, immediately dial the emergency services number for medical assistance.
5. If you have any questions, please contact us immediately.

