

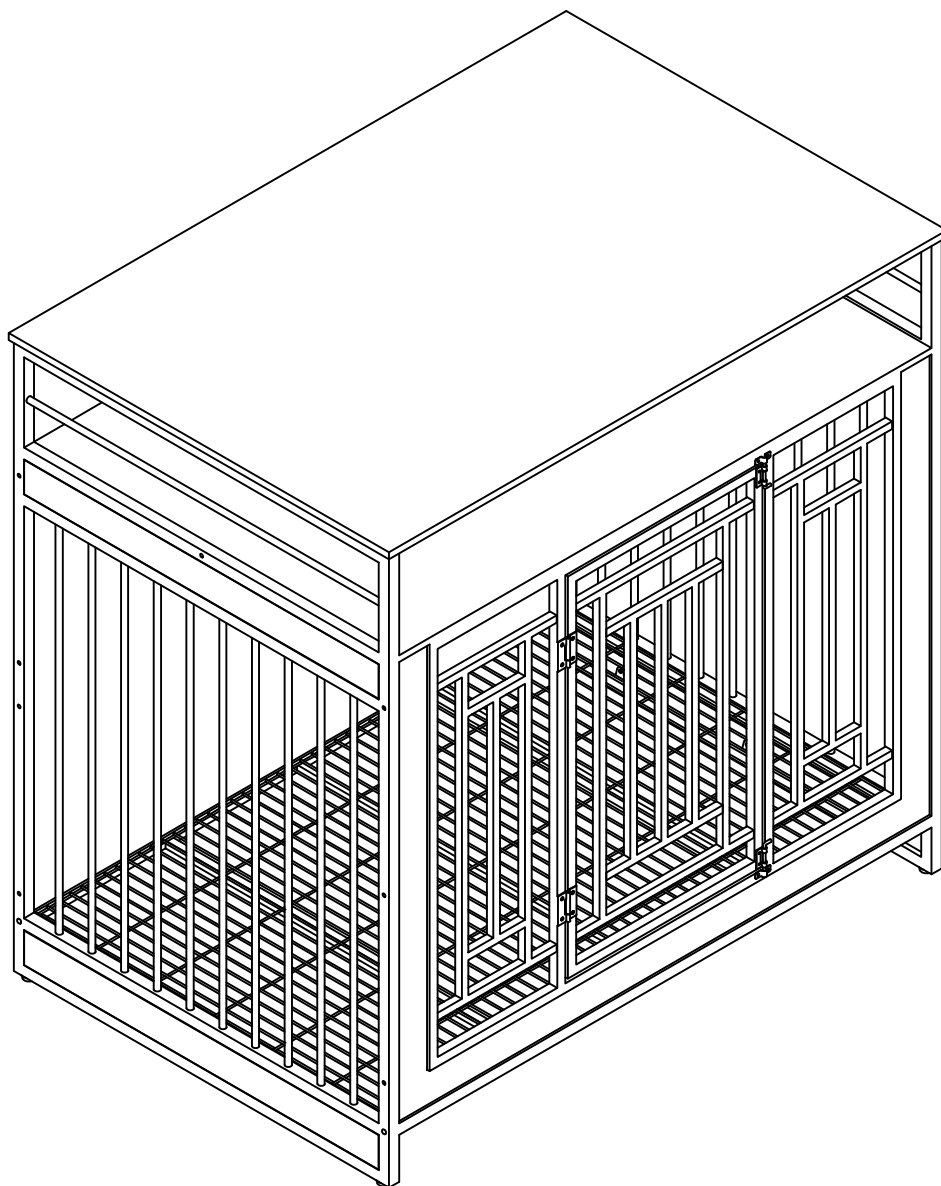
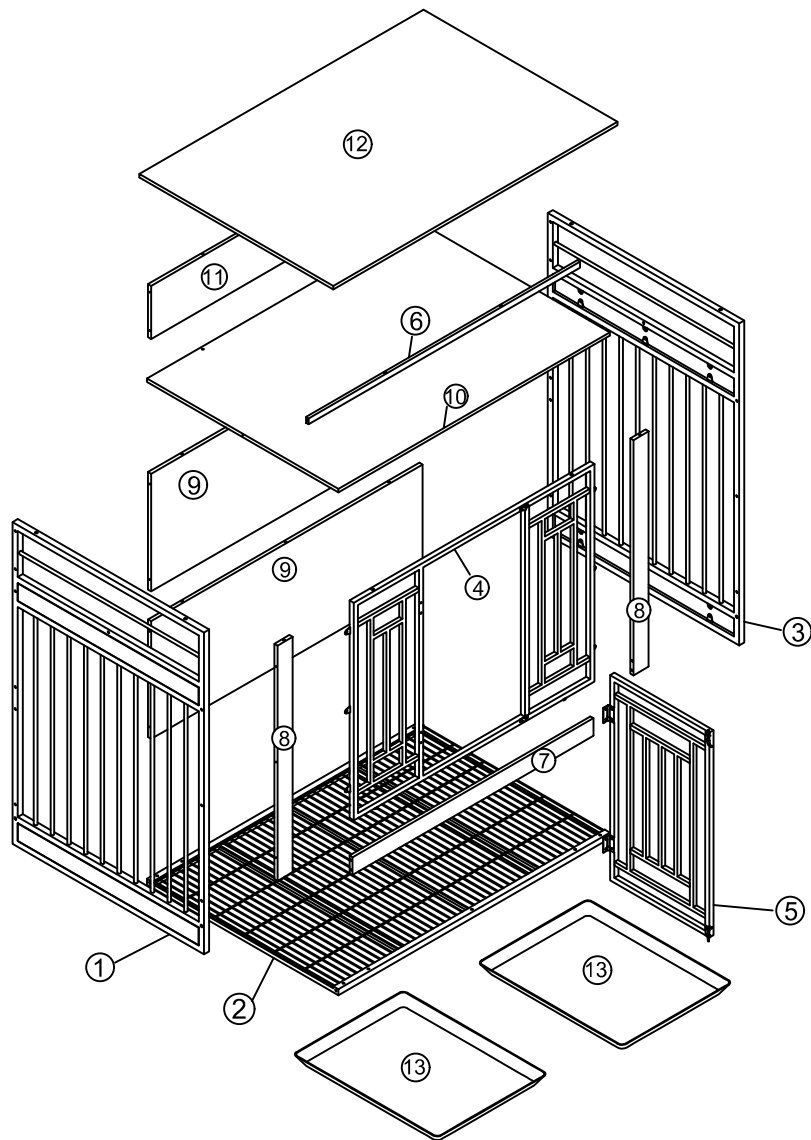





ASSEMBLY INSTRUCTION






A  M6*40mm	B  M6*28mm	C  M6*25mm	D  M4*14mm	E  Ø5*40mm
X 6PCS	X 6PCS	X 2PCS	X 4PCS	X 20PCS
F  4*10mm	G  Ø6*30mm	H  Ø22*M6*15mm	I  M4	J  M3
X 9PCS	X 20PCS	X 4PCS	X 1PC	X 1PC

STEP 1

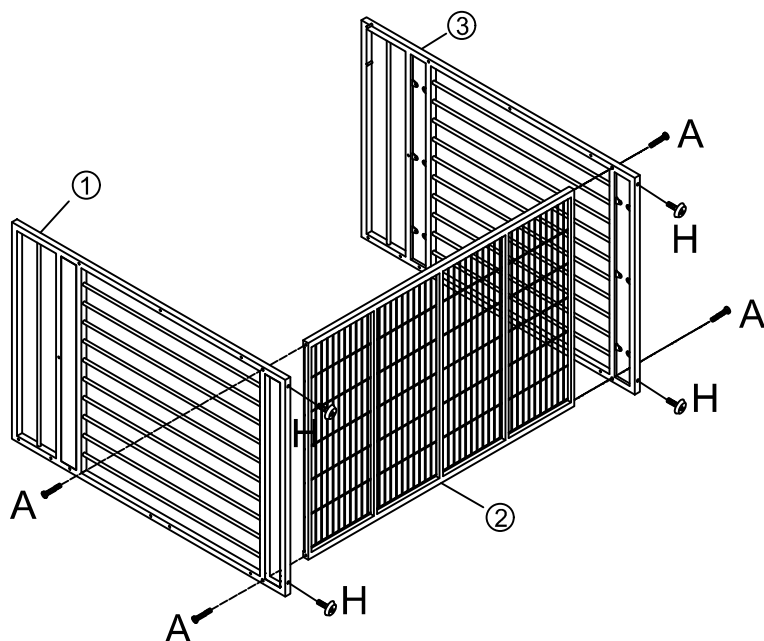

A



M6*40mm

X 4PCS


H



Ø22*M6*15mm

X 4PCS

STEP 2

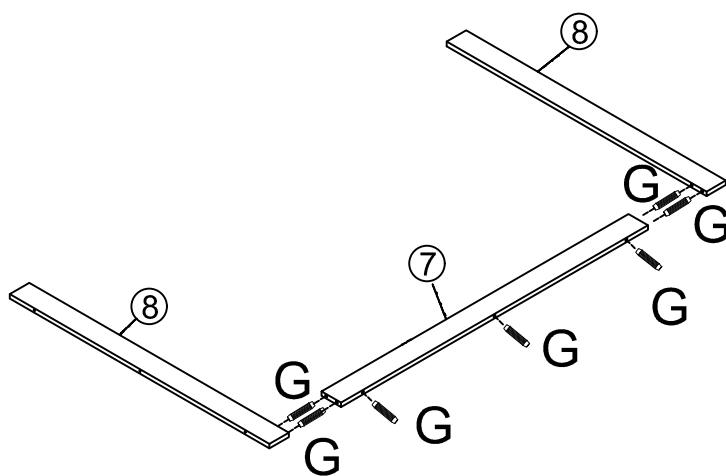

G



Ø6*30mm

X 7PCS


STEP 3

F




4*10mm


X 9PCS

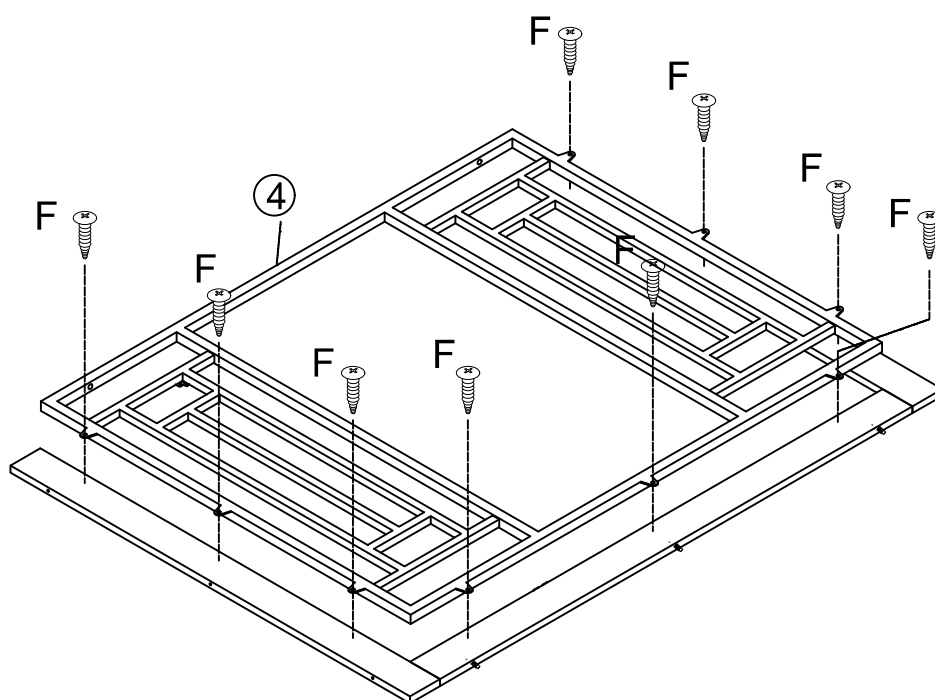


STEP 4

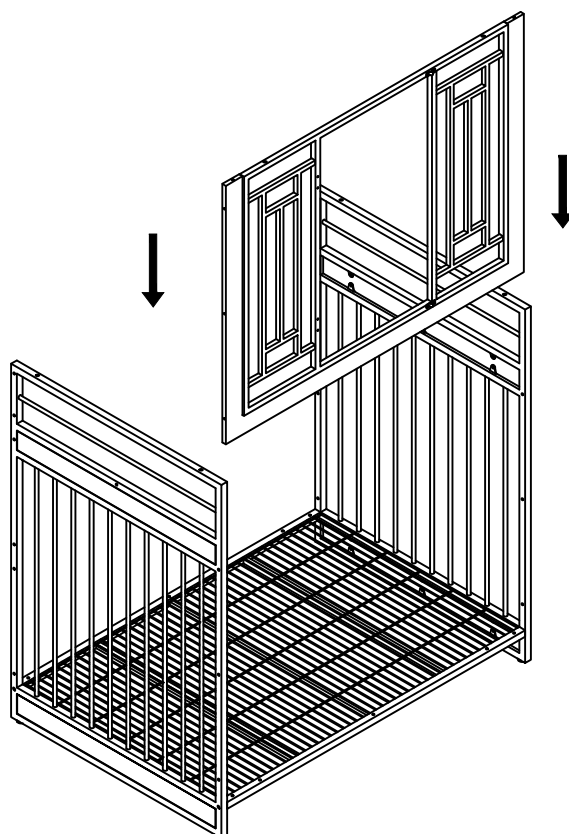

STEP 5

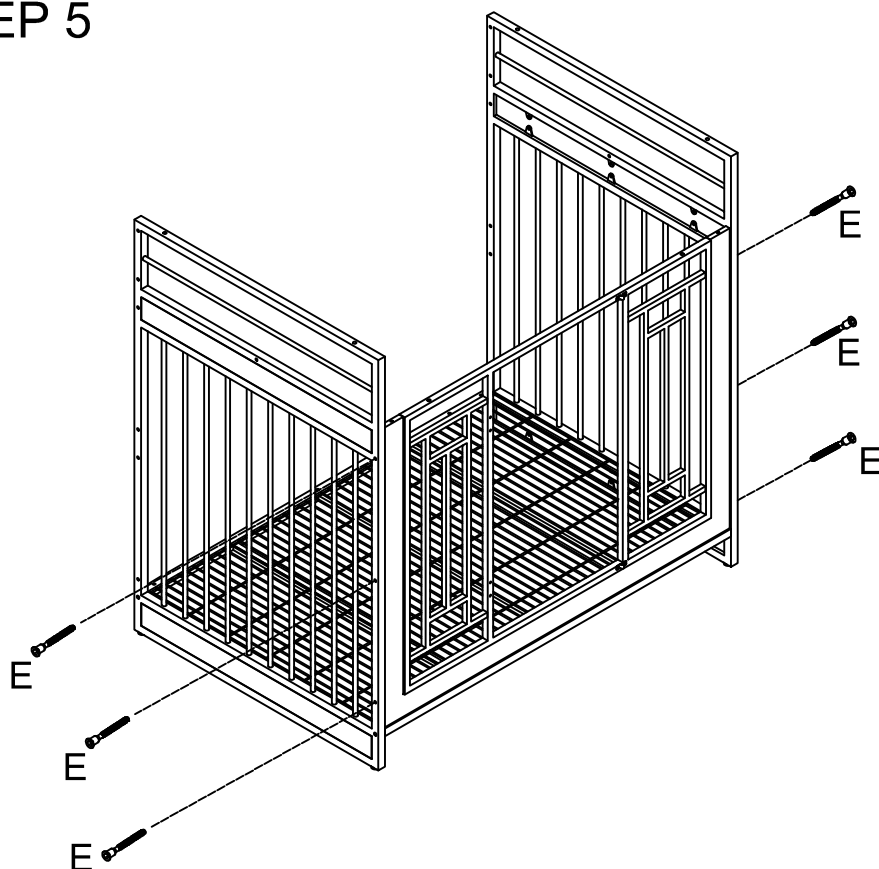


E



Ø5*40mm

X 6PCS

STEP 6

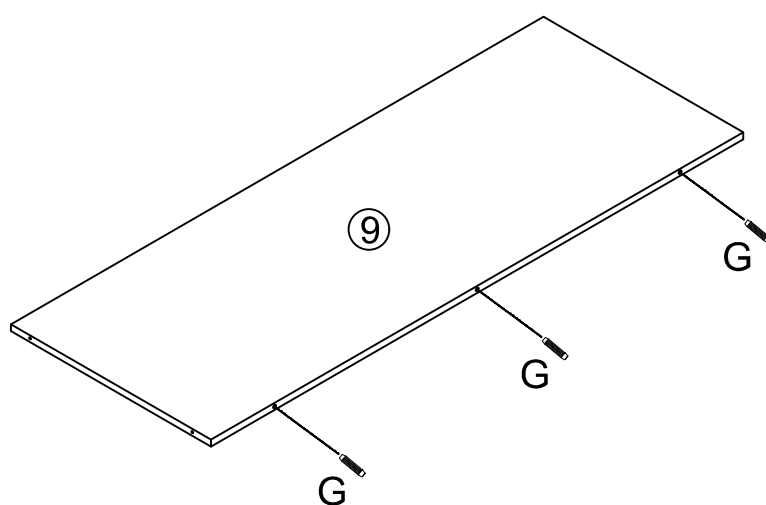


G




Ø6*30mm

X 3PCS


STEP 7

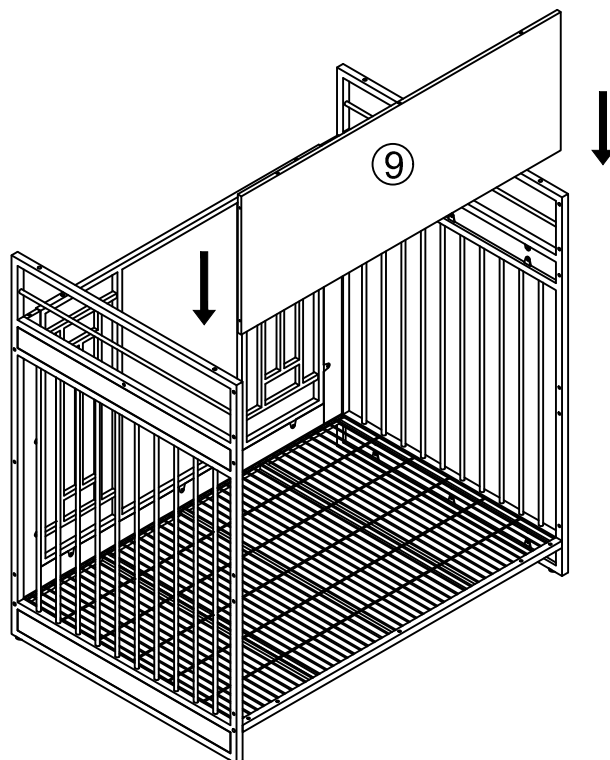

STEP 8

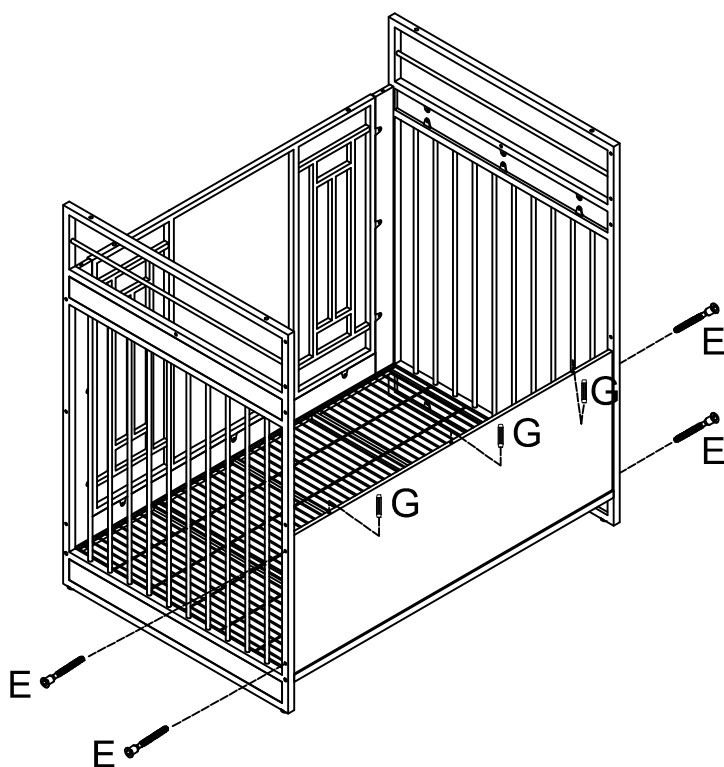

E



Ø5*40mm

X 4PCS


G




Ø6*30mm

X 3PCS


STEP 8

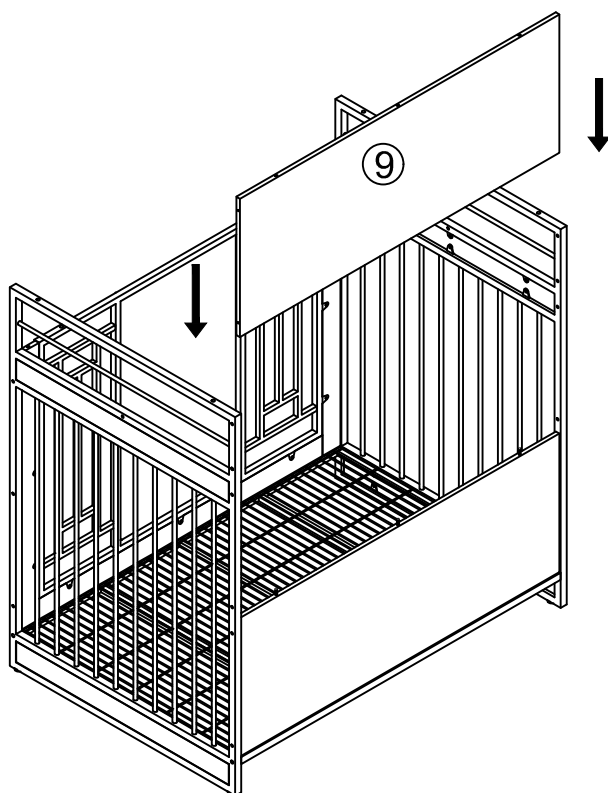

STEP 9

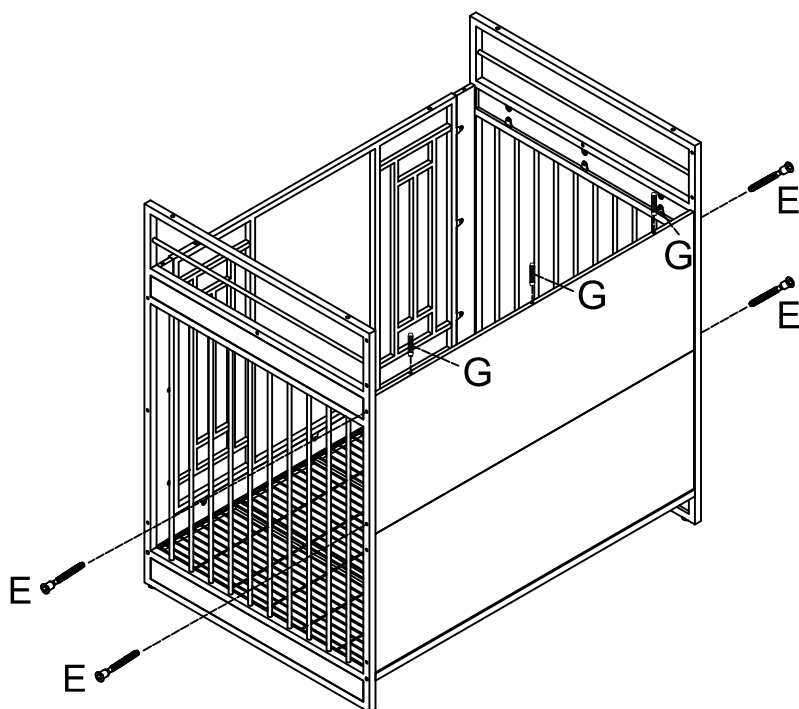

E



Ø5*40mm

X 4PCS


G




Ø6*30mm

X 3PCS

STEP 10

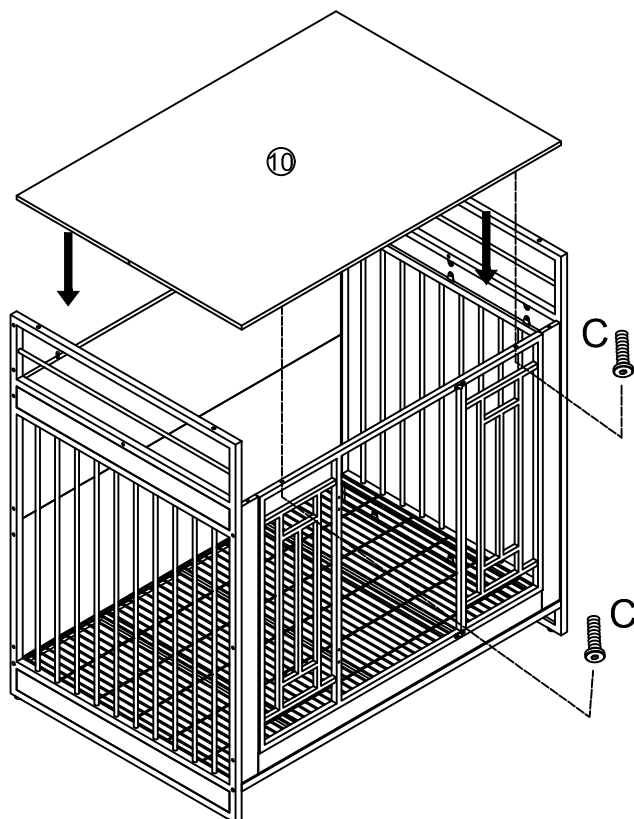


C




M6*25mm

X 2PCS

STEP 11

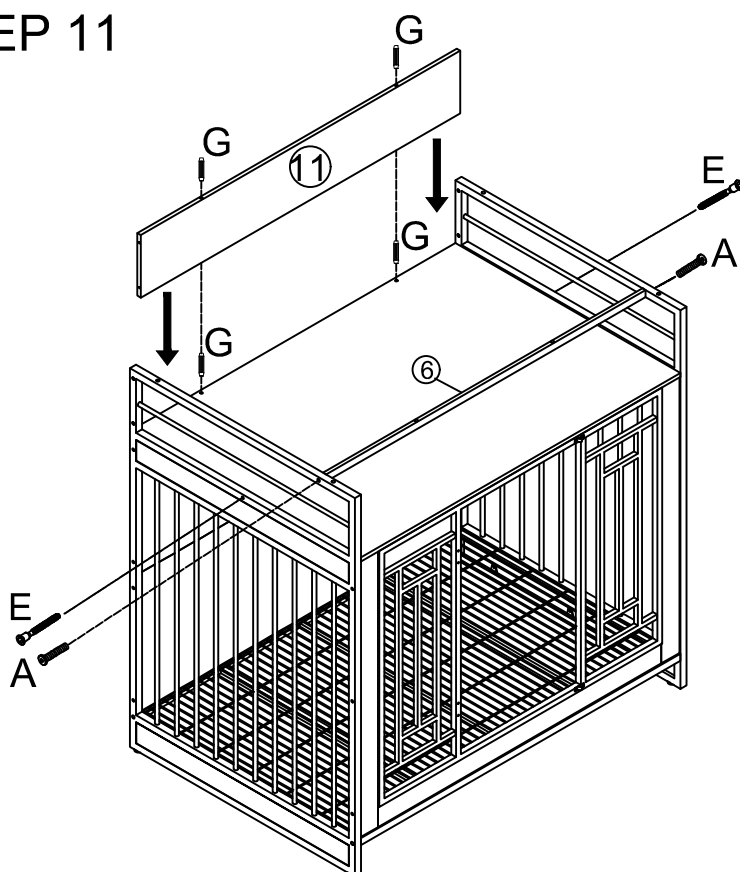


A



M6*40mm

X 2PCS

E



Ø5*40mm

X 2PCS


G




Ø6*30mm

X 4PCS

STEP 12

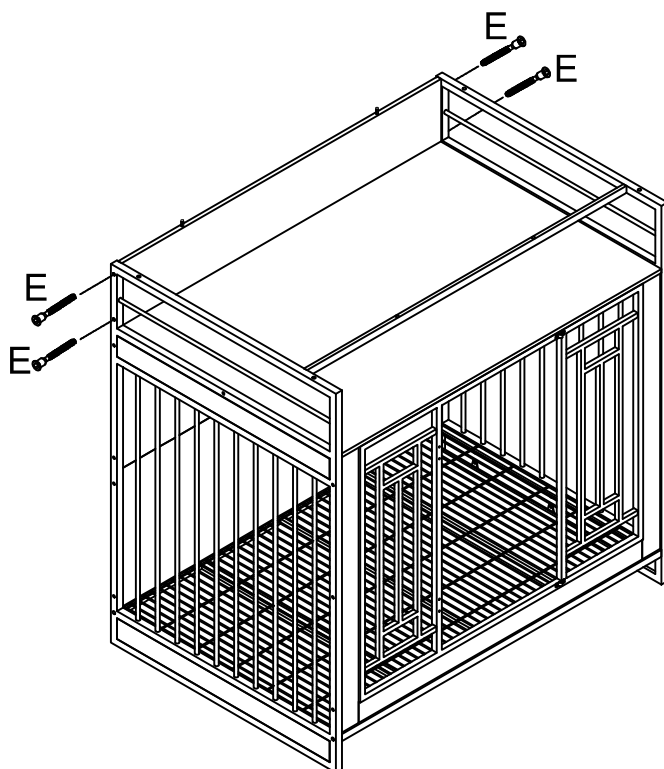


E




Ø5*40mm

X 4PCS

STEP 13

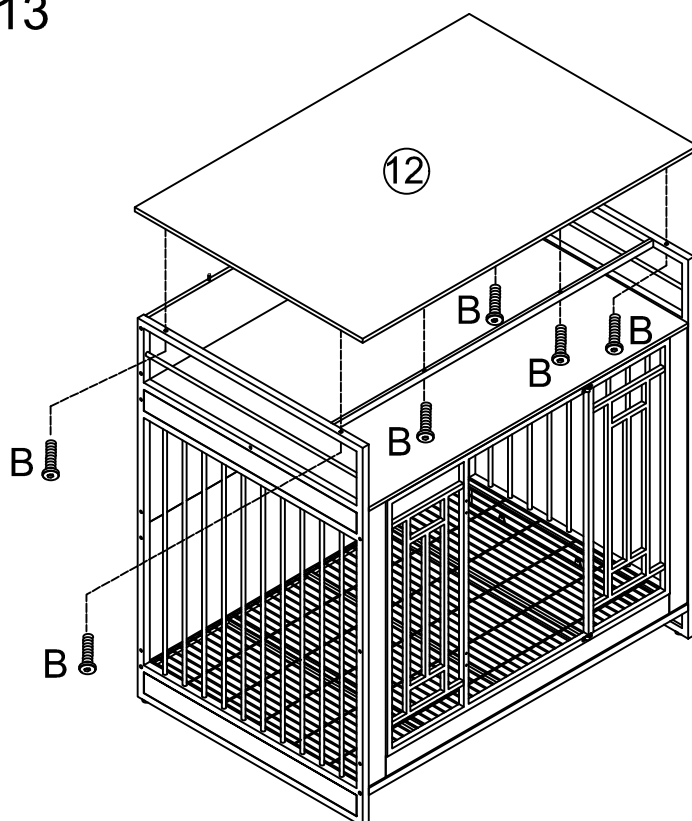

B



M6*28mm

X 6PCS


STEP 14

D




M4*14mm

X 4PCS

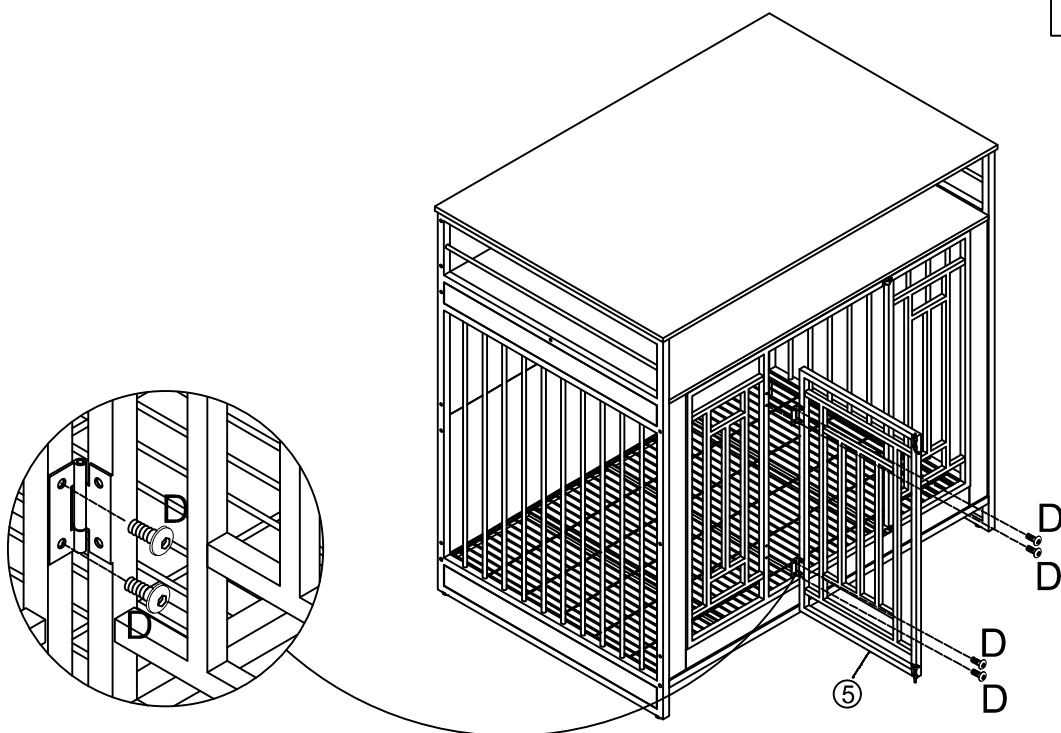

STEP 15

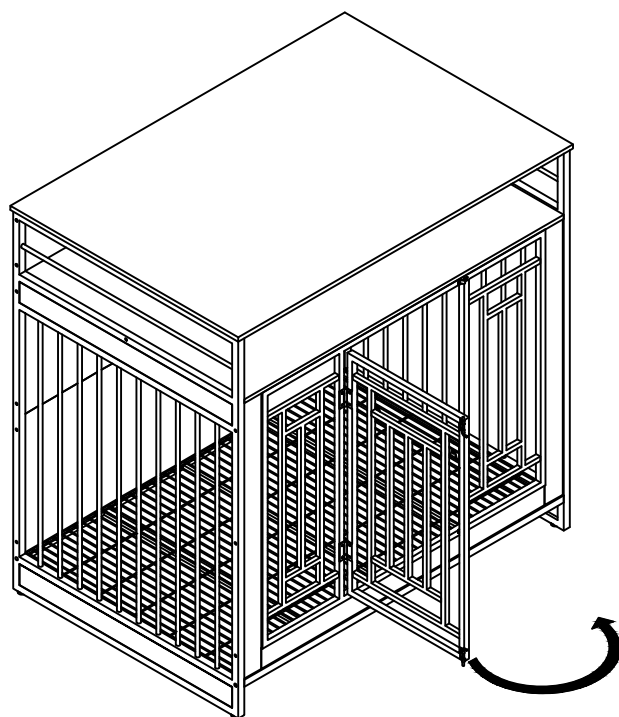

STEP 16

